

Gloss Meter

Model: LS197

User Manual V2.26

Please read this manual carefully before using and reserve it for reference.

I. Product Introduction

The is a hand-held gloss meter with three geometries of 20°, 60° and 85°, it measures up to three gloss values at the same time. This gloss meter can be used to measure the gloss of paint, coating, ink, plastic, paper, ceramic, stone, metal and electroplating layer, etc. The instrument is easy to use, put and measure, no need to press button. In addition to normal model, QC mode can be set for QC detection. The instrument can be connected to a computer, improving the efficiency of data organization.

It conforms to the following standards: ISO2813, ISO7668, ASTM D523, ASTM D2457, DIN 67530, GB/T 9754-2025, GB/T13891, GB/T7706, GB/T8807. All indexes meet the requirements of JJG 696-2015 Verification Regulation of “*Specular Gloss Meters and Gloss Plates*” as the grade 1 working meters.

II. Parameters

Measuring Angle	20°, 60°, 85°
Measuring Aperture	20°: 9mm*9mm; 60°: 9mm*15mm; 85°: 5mm*38mm
Minimum Test Material Size	57mm*10mm
Measuring Range	20°: 0-2000GU; 60°: 0-1000GU; 85°: 0-160GU
Resolution	0.1GU
Repeatability	0-120GU:±0.2GU; 120-2000GU:±0.2%
Reproducibility	0-120GU:±0.5GU; 120-2000GU:±0.5%
Zero Error	0.1GU
Indication Error	0-120GU:±1.5GU; 120-2000GU:±1.5%
Weight	About 300g
Power Supply	Lithium rechargeable battery 3.7V@2000mAh
Display	240×128 Dot Matrix
Language	Simplified Chinese, English

Charge Port	USB(Type-C)
Data Transmission	USB
Operating Temperature Range	0℃~50℃, 0~85%RH(no condensation)
Storage Temperature Range	-10℃~60℃, 0~85%RH(no condensation)
Supply Voltage	DC5V
Operating Current	20mA
Operating Power Consumption	100mW

III. Features

1. Real-time and put-and-measure services.
2. Detect samples quickly with the QC judging function.
3. The environmental temperature compensation function guarantees long-term calibration stability.
4. The instrument supports PC-connected measurement and Excel file export, making it convenient for subsequent organization, analysis, and archiving.
5. Designed with an emphasis on ergonomics, sleek style, and comfort grab feel.
6. Single, dual, and triple gloss angle measurement mode can be set on the geometry selection surface.
7. Built-in rechargeable lithium battery, with ultra-low power consumption, it can work continuously for more than 65 hours under full charge.

IV. Operation

1. Turn on/off

Turn On: In power-off state, short press the power button to turn on the instrument.

Turn Off: Long press the power button to turn off the instrument; the instrument will automatically power off with no operation over 30 minutes.

2. Parameter Setting

In power-off state, long press the button for 3s to enter the parameter setting mode:

Language


Short press the button to select Chinese or English, long press the button for 3s to complete the setting, and enter the next setting item.

Mode Selection

Short press the button to select normal mode or QC mode, long press the button for 3s to complete the setting, exit the setting and enter the calibration interface.

Geometry Selection

Short press the button to select geometry, single angle: 20°, 60° or 85°; dual angles: 20°60°, 20°85° or 60°60°; triple angles: 20°60°85°, long press the button for 3s to complete setting, exit setting and enter the calibration interface.

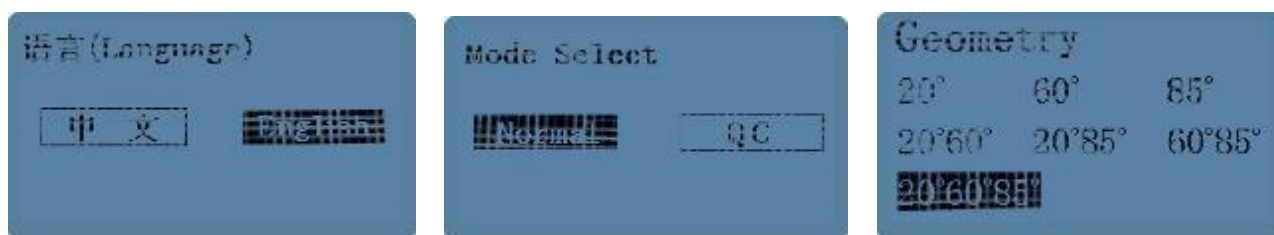

3. Calibration

If the meter gets powered on in calibration holder, it will enter the calibration interface. The user can perform the calibration operation according to the prompts, the instrument will enter measurement interface after the calibration. If it is not powered on in the calibration holder, it will skip the calibration and enter the measurement interface directly.

If it prompts that the calibration failed, the reasons may include:

- If the standard is not clean, please clean the standard with special lens cloth before placing the meter into calibration holder.
- If the meter is not clung to the calibration holder, please re-place into calibration holder.
- If there is a significant change in the ambient temperature, restart the device for measurement after the temperature of the instrument is close to the ambient temperature and it is confirmed that there is no condensation on the lens in the test port and the standard of the base
- If the light source cannot work normally due to attenuation, the device needs to be sent back to the factory for inspection and maintenance

When the instrument prompts "Calibration failed", long press the button can skip the calibration.

4. Measurement


(1) Normal Mode

If the instrument is set to normal mode, remove the calibration holder after calibration, place the measuring port on the surface of the object to measure, the instrument will display the measured value instantly. Short press the button, the lower left corner of the interface displays the "HOLD" symbol, and the measurement data is held on the display. To measure again, press the button to cancel the "HOLD" state and return to the "Measuring" state.



(2) QC Mode

If the instrument is set to QC mode, remove the calibration holder after calibration, place the measuring port of the instrument on the surface of the object to measure, short press the button to measure, the instrument will judge whether the measured value is qualified. The upper and lower limits could be set by PC software. For specific operations, please refer to the "*Gloss Meter Software Operation Manual*".

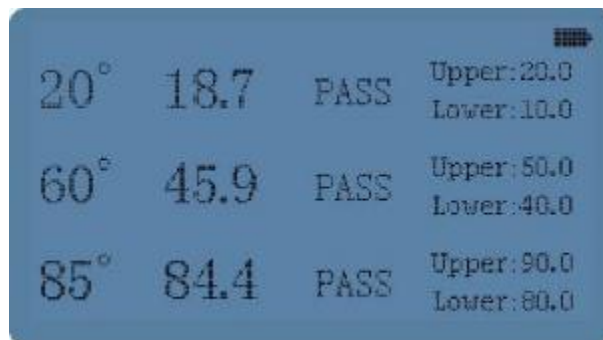

V. PC Software

Connect the instrument to PC software via USB cable to perform functions of online measurement, change calibration values, parameter setting and Export Excel. For specific operations, please refer to "*Gloss Meter Software Operation Manual*".

GlossMeter V2.1

中文

English

Device Info

SN: 197000123

Version: 1.02

Parameters

Mode

Normal Mode

QC Mode

Limit Settings

Angle	Show	Lower Limit	Upper Limit
20°	☒	60.0	70.0
60°	☒	75.0	80.0
85°	☒	85.0	90.0

Standard Modify

Measure

Export Excel

Clear Data

No.	20°	60°	85°	Time	Operation
1	61.9	78.8	86.6	2026-06-05 10:14:07	Delete
2	56.5	73.5	83.3	2026-06-05 10:14:42	Delete
3	61.0	80.0	85.3	2026-06-05 10:14:49	Delete
4	60.2	79.8	88.9	2026-06-05 10:15:28	Delete
5	60.8	79.6	88.4	2026-06-05 10:15:30	Delete
6	60.8	79.4	88.2	2026-06-05 10:15:33	Delete

VI. Precautions

1. The temperature compensation function guarantees long-term calibration stability, it is recommended to calibrate once a week. If the environmental temperature changes significantly, please recalibrate it.
2. The measuring port of the instrument shall be attached to the surface of the object to avoid leakage of external light.
3. Please save the calibration holder in a clean place after the meter is removed, so as to prevent the standard from contamination.
4. Do not insert any object into the instrument for any reason, as it will damage it and influence the measuring accuracy as well as operation safety.
5. The instrument and calibration standard should be cleaned before storage and usage, and please use clean special lens cloth to remove contaminants. As the surface of the standard is very precise, make sure there are no fine particles on the lens cloth to avoid damage of the standard.
6. If there are multiple meters, put the meter on the calibration holder corresponding to the serial number of the meter for calibration.
7. When the battery of the instrument is out of power, it should be charged in time.
8. If the meter is not used over half a year, please charge it to avoid the battery from being excessively discharged and damaged.

9. The recommended calibration period is once a year and the factory provides calibration services.

VII. Packing List

No.	Description	Quantity	Unit
1	Gloss Meter	1	Set
2	USB Data Cable	1	pcs
3	Special Lens Cloth	1	pcs
4	User Manual	1	pcs
5	Calibration Report	1	pcs

VIII. Service

1. The instrument has one-year warranty. If it works abnormally, please send the whole instrument to our company for maintenance.
2. Provide users with spare parts and lifelong maintenance services.
3. Provide the users with the gauge calibration service.
4. Provide long-term free technical support.

Manufacturer: Shenzhen Linshang Technology Co., Ltd.

Website: www.linshangtech.com

Service hotline: 086-755-86263411

Email: sales21@linshangtech.com